ARAT Telephone mount for

Type: V.W. Toureg

Part No: 1330

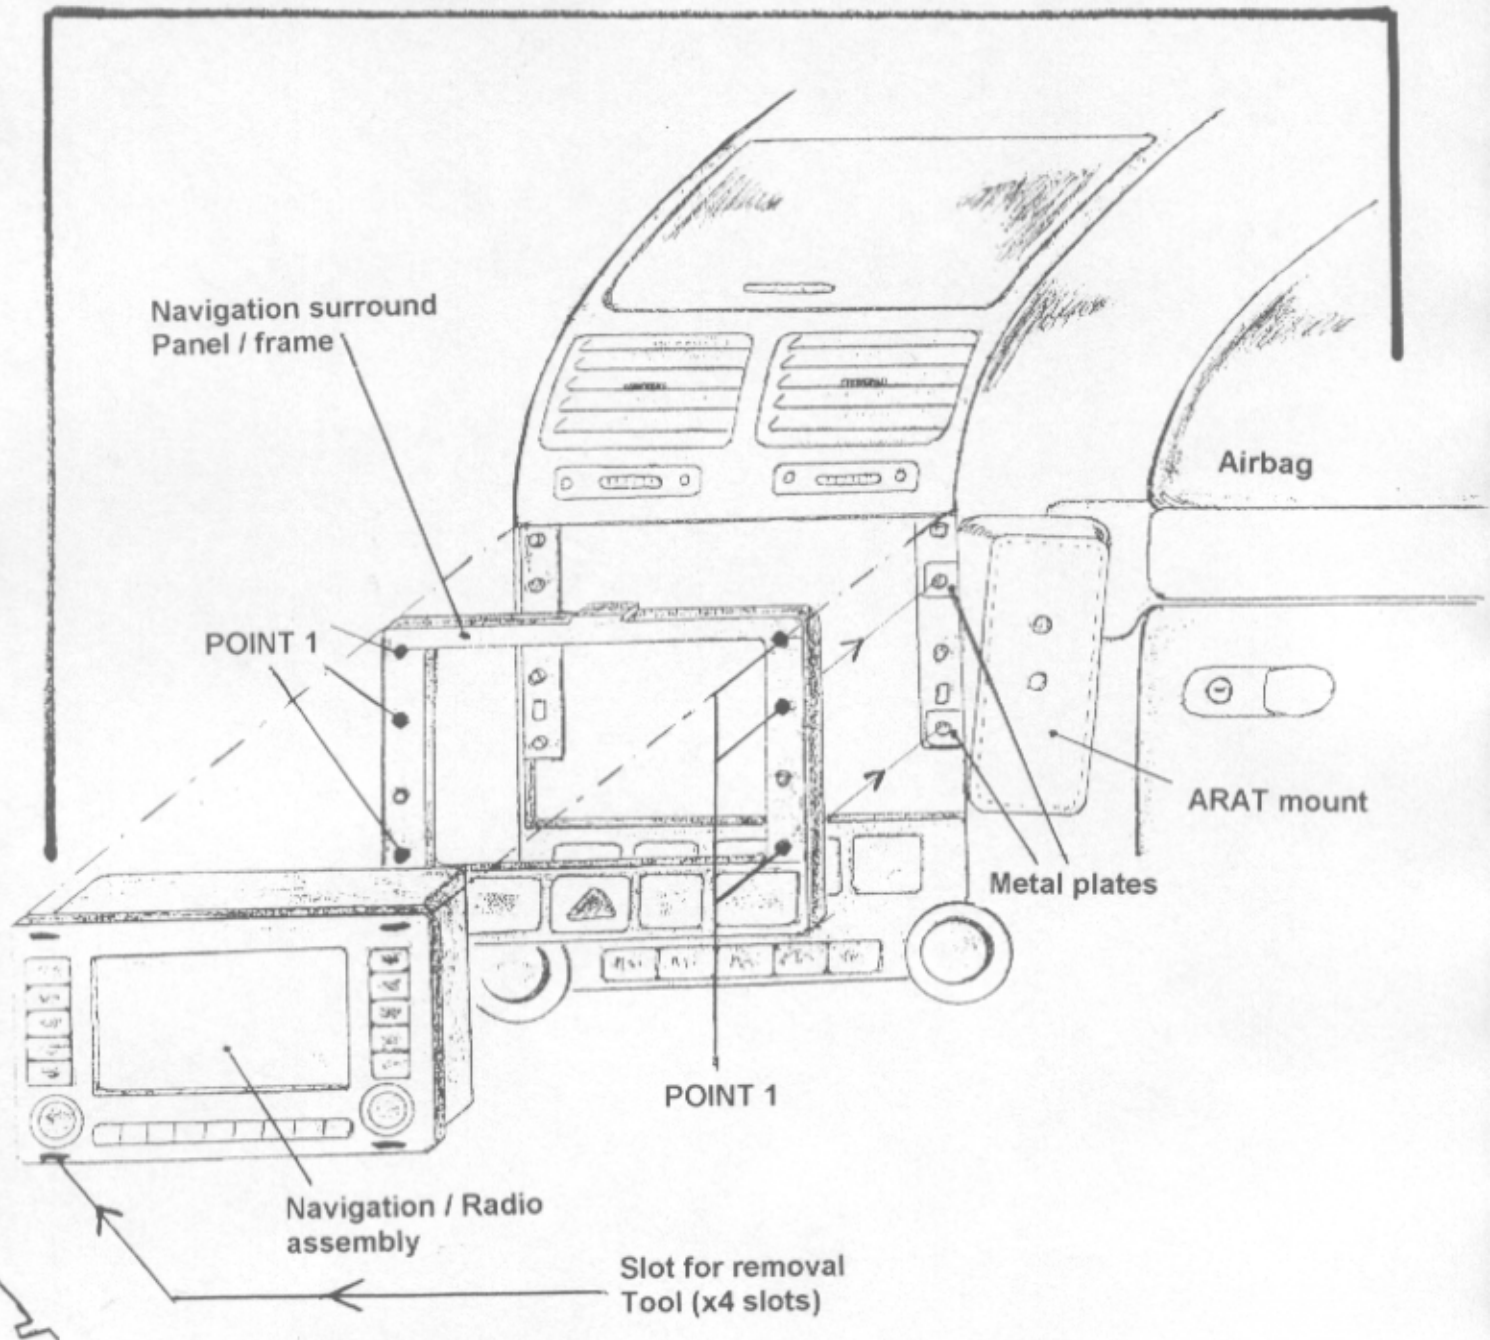

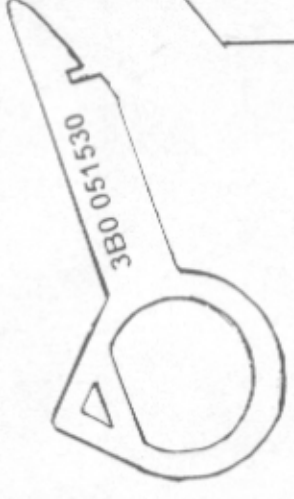

Installation instruction

1. Remove the navigation / Radio assembly from the dashboard using the special tool mentioned
2. Remove the navigation / Radio surround frame screws at POINTS 1, and remove the surround frame
3. Place the ARAT mount to the contours of the dashboard and replace the surround frame, ensuring that the two screws on the right hand side pass through the top and bottom metal plates
4. Replace the navigation / Radio assembly